



# Roxil® Wood Scrub Gel

## **Product Information**

Roxil® Wood Scrub Gel is a clear gel-based cleaner used to clean and revive weathered softwood. It helps remove grey discolouration and revives the colour of timber. The gel formulation ensures easy and accurate application. Roxil® Wood Scrub Gel can be applied with brush or roller. It is suitable for horizontal and vertical outdoor wood surfaces such as wooden decking or garden furniture.

## **Benefits**

- · Helps to revive the natural appearance of weathered softwoods
- · Removes greyed patina
- Cleans wood
- Gel formulation

## **Properties**

Appearance	Clear gel
Size(s) & Packaging	1 litre and 5 litres
Coverage	1 litre will cover approximately 10 m <sup>2</sup> [7]
Storage	Store in a cool dry place. Protect from frost
Shelf Life	12 months

## **Application Information**

## Preparation

Intended for weathered, unpainted and unvarnished wood. Ensure no rain is forecast for during the cleaning process (allow 24 hours for best results).

Clean debris and dirt from the surface. If there is heavy biological growth, cleaning the surface with a biocidal wash such as Roxil® 100 Wood & Patio Cleaner is advised. Follow the instructions for the biocidal wash.

Ensure tools are clean and in good condition. Shield metal from direct contact. Keep away from plants. Not recommended for cleaning antique, ornamental or otherwise fragile wood.



#### Test Area

To determine compatibility, a small test area is recommended before full application.

Efficacy may vary based on wood species and condition. Previous treatments may affect performance.

## **Application**

Dampen the surface with water prior to application.

Apply a liberal layer of the gel with a brush or roller, where possible try to follow the direction of the wood grain. Leave for a minimum of 20 minutes, or for best results an hour. Using a stiff and wet brush, work the layer of gel over the surface of the wood. Use water to help the workability of the gel. Then rinse off the surface and allow to dry.

Do not use a pressure washer as these can damage softwoods. Clean excess from the brush with warm soapy water.

Once the substrate is fully dry, lightly sand with fine-grade sandpaper to remove raised wood grain. Apply light and even pressure.

### Overcoating

See recommendation from the  $\mbox{Roxil}^{\mbox{\scriptsize @}}$  range of wood primers and finishes for coating options.

<sup>(</sup>i) Coverage will vary depending upon the overall porosity and texture of the substrate to be treated (i.e. decking boards vs planed wood)



#### **BUILT TO PROTECT**



## **Other Information**

This material and its container must be disposed of in a safe way. Do not empty into drains. Do not contaminate ground, waterbodies or watercourses with chemicals or used container. Once the container is empty, rinse out onto the treated surface prior to disposal. The empty container is suitable for recycling.

Store in a safe place. Keep away from food, drink and animal feedstuffs. Keep out of reach of children and animals.

Unprotected persons and animals should be kept away from treated surfaces until dry. For full health and safety information consult Safety datasheet (available on request). Always read the label.

**Roxil® Wood Scrub Gel** is produced in accordance with ISO 9001 and ISO 14001 quality and environmental management systems.

Information given is in good faith based on experience and usage, however all recommendations are made without warranty or guarantee, since the conditions of use are beyond our control. All goods are sold in accordance with our Conditions of Sale, copies of which are available on request. Customers are advised that products, techniques and codes of practice are under constant review and changes occur without notice; please ensure you have the latest updated information.